

Country:	印度	Size:	L130*W95mm	Range	>0-10	>10-35	>35-85	>85-185	>185-320	>320-1550	ANGLE
Customer:	UltraLink	Material:	80g 书纸	Tolerance	±0.05	±0.10	±0.15	±0.20	±0.25	±0.30	±0.1°
Order no.:	088L	Process:	风琴折	Designed by:	FangWenling		Version				
P/N.:	84-100V11-012	Color:	黑白印刷	Ratio	1:1		Checked by:				
Date:	2019.07.09			Measurement:	mm		Approved by:				



深圳市百亿耳电器有限公司
METEC ELECTRONICS CO.,LTD

EM-V1说明书

1:1图纸

“- - - - -” 折叠线

“- - - - -” 编辑范围线不用印刷

正面


Unit Operation

1. Turn on the unit from side panel of unit.
2. Connect the audio cable to the sound source (e.g. mobile phone, computer). One end of the cable should be inserted into the AUX jack on the unit. The other end of the cable should be inserted into the output jack of the sound source.
3. When you switch the on the unit, the display will light up. The unit starts to play from the default FM mode (if USB card or TF card have no memory connect).
5. The volume, bass and treble can be adjusted from the controls on the unit.
6. When a USB card or TF card is inserted, it will play from the device last inserted.
7. Press the input button to change the input source from LINE IN, USB, TF card, FM and BT.
8. When a USB card or TF card is inserted, you can navigate songs by pressing the PREV and NEXT buttons.
9. When a USB card or TF card is removed, it switches automatically to FM mode.
10. After you stop using the unit, turn off the power switch.
11. The battery can only use 2-3 hours, pls full recharge every time after using.
12. To save battery power, pls put the battery switch at "off" position when finishing operation.


Bluetooth Operation

1. Turning on the power, press the "INPUT" key or "BT" key on the panel, switch the speaker to Bluetooth mode. Then turn on the Bluetooth function of devices.
2. Search the Bluetooth device list and select the Bluetooth name "Bluetooth". The speaker will sound notification tone when the connection is successful.
3. Play the music on your device by music player. The music will be transferred via Bluetooth, and sound comes out through the speaker.
4. To disconnect the Bluetooth device, the user can turn off Bluetooth function on the device, or press the "INPUT" key or "BT" key on the speaker panel to change the playing mode.

PORTABLE SPEAKER SYSTEM

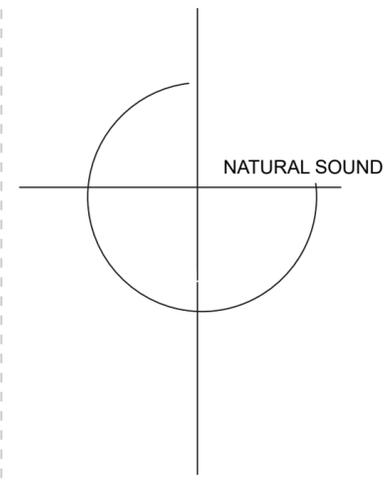

PORTABLE SPEAKER SYSTEM

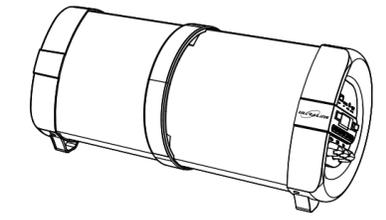

MODEL NO: UL-BTAS02

Please read this manual carefully before starting to operate the unit. This prevents malfunctions and lets you experience all features of your new equipment.

背面

Safety Precaution

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING:
In order to avoid the risk of fire or electric shock, do not expose this unit to rain or moist environments.
*Note: This product is for indoor use only.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Important safety instructions

- 1) Read these instructions before using the product.
- 2) Read all warnings carefully.
- 3) Follow all instructions carefully.
- 4) Do not use this apparatus near water.
- 5) Clean only with dry cloth.
- 6) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7) Do not install the speaker system near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Protect the power cord from being walked on or pinched particularly at plug points and the point where they exit from the unit.
- 9) Only use attachments/accessories specified by the manufacturer.
- 10) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, be cautious while moving the cart/unit combination to avoid injury from tip-over.
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.


Content

- Content
- Technical specifications
- Safety Precaution
- Panel operating instructions
- System connection
- Operation
- Instructions
- Bluetooth Operation

Technical specifications

- Power: 30W
- Impedance : 4Ω
- Frequency Response : 40Hz-20K Hz
- S/N Ratio : ≥71dB
- Harmonic Distortion : ≤0.7%(1W)
- Drive Unit : 5.25**1 +1.5**1
- Bluetooth Name : UL-BTAS02
- FM Frequency : 87.50 -108.00 MHz
- Input: DC 5V
- Battery: 7.4V/2200mAh

Panel operating instructions

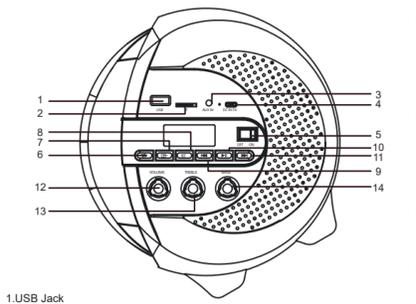

1. USB Jack
2. TF card
3. AUX in jack
4. DC 5V
5. Power on/off
6. REPEAT: Music playback in different cycle mode
7. SOURCE: To switch USB/SD/FM/AUX/Bluetooth mode
8. Bluetooth: This button only functions when your speaker system has Bluetooth function
9. PREV: To select the previous song in USB or to select previous channel in radio station
10. PLAY/PAUSE: To play / pause in USB. Long press "PLAY / PAUSE" for 3 seconds to search And save channels automatically in radio station
11. NEXT: To select the next song in USB or to select next channel in radio station
12. VOL: Increase or decrease volume
13. Treble: Increase or decrease Treble effect
14. Bass: Increase or decrease Bass effect

