



# User Manual

DVD Player



UL-DVD300

QUICK USER GUIDE

## Important Safety Instructions - Please read carefully and keep for future reference.

|   |   |
|---|---|
|  | To reduce the risk of fire or electric shock, do not expose this product to water, rain or moisture. To prevent the risk of electric shock, do not remove the cover or back. In case of product failure, only qualified personnel can repair. There are no user-serviceable parts inside. |
|  | Use of controls, adjustments, or performance of procedures other than those specified herein may result in dangerous radiation exposure. This product is rated as LASER CLASS 1 PRODUCT. CAUTION: Never stare into the laser beam.  |

### Safety Information

There are high voltage zones inside this equipment that may cause injury to people. Please do not open the unit under any circumstances. In case of any technical failure, please get in touch with our Customer Service Department.

The unit must be installed in accordance with local laws.

In order to protect the environment, please dispose of the batteries, in accordance with local laws (information is available at your reseller).

### Important Safeguards

- Do not place the unit on an unstable surface as it may fall and break, or cause damage to people or pets.
- Do not place the unit on top of another appliance as this may cause overheating (for example, a receiver or amplifier).
- Do not place anything underneath the product (for example, CDs or magazines).
- Place the unit in a well ventilated area to avoid overheating. Allow at least 10cm spacing at the back and top of the product, and 5cm spacing on both sides.
- Do not place items such as newspapers, tablecloths or curtains in front of the ventilation openings.
- Do not expose the unit to high temperatures, moisture or dust.
- The unit must not be exposed to dripping or splashing. No objects filled with liquids, such as a vase, must be placed on the unit.
- No naked flame sources, such as a lit candle, should be placed on the unit.

- Please unplug the unit when it will not be used for a long time.
- In order to avoid either a fire or electric shock, please do not place the unit outdoors or in high moisture zones.
- If the supply cable is damaged, it must be replaced by the manufacturer or qualified after-sales personnel to avoid a hazard.
- Check that the mains voltage corresponds to the rating of the unit before operating.
- The mains plug is used as the disconnect device so the disconnect device must remain readily operable.



## Disposal


- The presence of dangerous substances in electrical and electronic equipment can have hazardous consequences on the environment and human health in the cycle of reprocessing this product.
- Therefore, at the end of its lifetime, this product must not be disposed of with other non-recycled waste.
- You have the obligation to use the selective waste collection systems put in place by your local authorities.

## CONTENT

|  |    |
|--|----|
| 1. Front Panel and Rear Panel Illustration ..... | 2  |
| 2. Connections .....                             | 2  |
| 3. Remote Control.....                           | 3  |
| 4. System setup.....                             | 6  |
| 5. Operating Instructions .....                  | 10 |
| 6. Troubleshooting.....                          | 11 |


## Front Panel and Rear Panel Illustration

### Front Panel

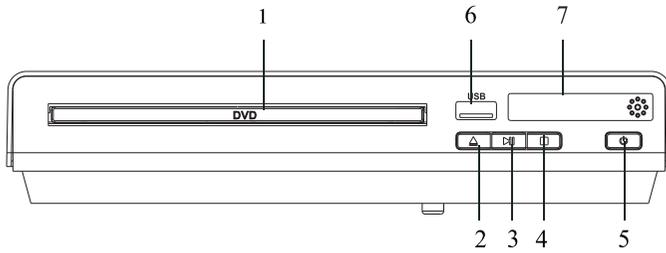


- 1. CD TRAY
- 2. OPEN/CLOSE
- 3. PLAY/PAUSE
- 4. STOP
- 5. POWER
- 6. USB
- 7. LED DISPLAY

### Rear Panel

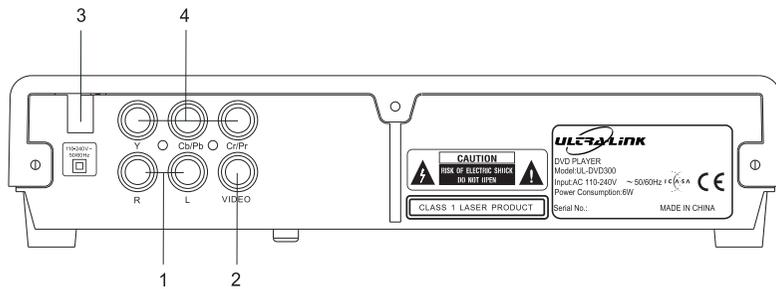

- 1. L/R OUTPUT
- 2. VIDEO OUTPUT
- 3. POWER SUPPLY JACK
- 4. Y/Cb/Cr output

## Remote Control

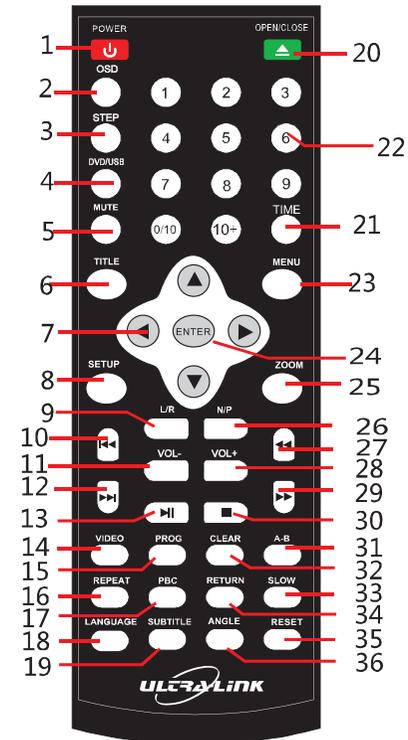

- |                   |                     |             |
|-------------------|---------------------|-------------|
| 1. POWER ON/OFF   | 13. PLAY/PAUSE      | 25. ZOOM    |
| 2. OSD            | 14. VIDEO           | 26. N/P     |
| 3. STEP           | 15. PROG            | 27. REV ←←  |
| 4. DVD/USB        | 16. REPEAT          | 28. VOL+ →→ |
| 5. MUTE           | 17. PBC             | 29. FWD →→  |
| 6. TITLE          | 18. LANGUAGE        | 30. STOP    |
| 7. DIRECTION ▲▼▶◀ | 19. SUBTITLE        | 31. A-B     |
| 8. SETUP          | 20. OPEN/CLOSE      | 32. CLEAR   |
| 9. L/R            | 21. TIME            | 33. SLOW    |
| 10. PREV ←←       | 22. NUMERIC BUTTONS | 34. RETURN  |
| 11. VOL- ←←       | 23. MENU            | 35. RESET   |
| 12. NEXT →→       | 24. ENTER           | 36. ANGLE   |

1. **POWER**: Press this button to turn the unit on or switch to standby mode.
2. **OSD**: Press this button repeatedly during playback to display information about the current disc and the current playback.
3. **STEP**: Press this button to play picture by picture. Press **PLAY** to return to normal.
4. **DVD/USB**: Press this button to switch between **DVD** and **USB** mode.
5. **MUTE**: Press this button to mute the sound during playback.
6. **TITLE**: Press this button to enter the **Title** menu.
7. **↑ UP**: Press this button to move up through the options.  
**← LEFT**: Press this button to move back through the options.  
**↓ DOWN**: Press this button to move down through the options.  
**→ RIGHT**: Press this button to select the option.
8. **SETUP**: Press this button to enter **Setup** mode.
9. **R/L**: While playing VCD or CD discs, press R/L button to select the **Left channel**, **Right channel** or **Stereo**.
10. **⏮**: Press this button to return to the previous chapter/track.
11. **VOL-**: Press this button to decrease the volume.
12. **⏭**: Press this button to skip to the next chapter/track.
13. **PLAY/PAUSE**: Press this button to start/pause/resume the current playback.
14. **VIDEO**: Press this button to switch between **CVBS** and **YUV**.
15. **PROG**: Press this button to set up the memory order of a chapter/title/track.
16. **REPEAT**: Press this button repeatedly during playback to select available repeat modes, dependent on the current media being played.
17. **PBC**: Press this button for playback control.
18. **LANGUAGE**: Press this button to select the menu language.
19. **SUBTITLE**: Press this button repeatedly during playback to display the available subtitle options or to deactivate them. The disc being played should have this feature.
20. **OPEN/CLOSE**: Press this button to open or close the disc tray.
21. **TIME**: Press this button to select time for title/chapter/track. The number buttons can be used to input the time.
22. **Number buttons**: Press these buttons to enter the required title/track/chapter.

23. **MENU**: Press this button to return to the main menu.
24. **ENTER**: Press this button to confirm a selection.
25. **ZOOM**: Press this button to select the zoom image level. Use the direction buttons to move through the increased image.
26. **N/P**: Press N/P button to switch between **NTSC** and **PAL**.
27. **⏮REV**: Press this button to rewind.
28. **VOL+**: Press this button to increase the volume.
29. **⏭FWD**: Press this button to fast forward.
30. **■ STOP**: Press this button to stop play.
31. **A-B**: Press this button once during playback to set the starting point (A) of the segment. Press again to set the end point (B) and start the loop playback of this segment (A-B). Press again to exit this mode and return to normal playback.
32. **CLEAR**: Press this button to clear input selections.
33. **SLOW**: Press this button during playback to enter slow forward status.
34. **RETURN**: Press this button to return to the VCD menu.
35. **RESET**: Reset the primary interface.
36. **ANGLE**: If different angles are recorded on the disc, you can press **ANGLE** repeatedly to select the angle you desire.

Please note:

- To insert the batteries, remove the back cover of the remote control, insert two AAA batteries then replace the cover.
- When using the remote control, please point the emitting port directly at the receiving port of the player and make sure there is no object in between them.
- If the remote control can function only at a short distance, replace the batteries. The two batteries should be replaced together.
- Batteries must be checked regularly to avoid leakage of battery fluid, which may damage the remote control.
- Avoid exposing the remote control to high temperatures and shaking. Do not let it fall.

# System Setup

## Menu Operation

Press the SETUP button on the remote control to display the Setup (Main) Menu.


1. Once the Setup Menu is on display, use the LEFT and RIGHT buttons to select an option then press ENTER to enter the sub-menu.

Press the UP and DOWN buttons to select the desired setting then press ENTER to confirm your selection.

2. To exit the Setup Menu, press the SETUP button again.

Please note: The items in gray cannot be changed.

## General Setup Page

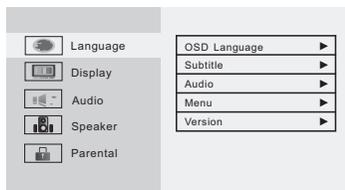

- **OSD Language**

Select the on-screen display language.


- **Subtitle, Audio, Menu**

These are your initial settings and will only work if the disc supports these functions (will default to the disc value if not supported).

- **Version**

Software information.

## Display Setup Page

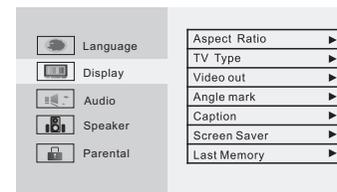

- **Aspect Ratio**

16:9: Use this aspect ratio when the unit is connected to a wide-screen TV set.

4:3/LB: Use this aspect ratio when the unit is connected to a normal TV set. Black bars will appear on the top and bottom of the screen.

4:3/PS: Use this aspect ratio when the unit is connected to a normal TV set. The wide screen image will be shown on the full screen but some parts will be cut off.

- **TV Type**

This unit is suitable for the following TV systems: AUTO, NTSC and PAL.

AUTO: The TV system will automatically switch according to the disc that is playing.

NTSC: This system is used in USA, Taiwan, Japan, etc.

PAL: This system is used in South Africa, Europe, etc.

- **Video Out**

CVBS: Video output when connecting to video terminals.

YUV: Set video output in analogue component video format when connecting to Y/U/V terminals.

- **Angle Mark**

Appears when the DVD has multi-angles.

- **Caption**

This function does not work when the disc has no caption options.

The default setup is Caption Off.


- **Screen Saver**

If the Screen Saver option is set to On and the unit is switched on without a disc playing, then a moving picture will appear on the screen. After about 20 minutes, the unit will go into Standby mode. You can press any key on the remote control to activate the unit.

- **Last Memory**

If the Last Memory option is set to On and the unit is switched off, the last position on the DVD will be memorized.

## Audio Setup Page

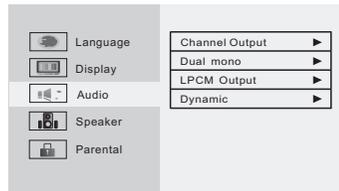

### ● Channel Output

**Lt/Rt:** When you select this option, the left and right surround sounds are synchronously outputted to the left and right channels.

**Stereo:** When you select this option, the left and right surround sounds are respectively outputted to the left and right channels.

### ● Dual Mono

**Stereo:** Set audio output to the stereo output.

**L-Mono:** Set audio output to the mono-left channel.

**R-Mono:** Set audio output to the mono right channel.

**Mix-Mono:** Set audio output to the mix mono channel.


### ● LPCM Output

On LPCM output, can choose the different frequency 48K or 96K.

### ● Dynamic

If you are watching a dynamic sounding movie at night, select this mode to reduce the treble and bass while still maintaining the finer detailed sounds. In this way you will not disturb the family and close neighbours, and still retain the sound quality.


## Speaker Setup Page

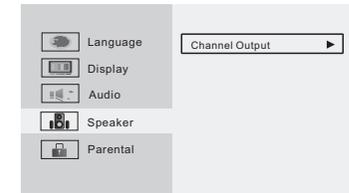

### ● 3D/EQ

Seven EQ modes are available. You can select one according to your preference and the disc content.

## Parental Setup Page

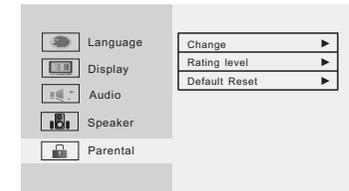

### ● Change

The control level is for parents to control the content being played. Any disc with a level higher than the set level can not be played. You can only change the level when the Password Setup is set to Off.

You can set your own password. Kindly note that the initial factory password is 0000. If you forget your own password, you can use 0000 as a general password.

### ● Default Reset

Return to original factory settings.

## Operating Instructions

### To play a JPEG/Kodak Picture CD Disc:

- Press STOP key and 12 small pictures will appear on the TV screen.
- Press UP/DOWN/LEFT/RIGHT to select the desired picture.
- Use UP/DOWN/LEFT/RIGHT/ENTER keys to operate the Instruction Menu. The Instruction Menu is as follows:

【PROG】: Press to change the picture transform mode.

【STOP】: Press to enter picture preview mode.

【PREV】: Press to view the previous picture. 【NEXT】: Press to view the next picture.

【PLAY】: To play picture. 【UP】 Mirror image vertically.

【DOWN】: Mirror image horizontally.

【LEFT】: Press to rotate the image 90 degrees anti-clockwise.

【RIGHT】: Press to rotate the image 90 degrees clockwise.

【ZOOM】: Press to select a zoom mode.

【UP/DOWN/LEFT/RIGHT】: Press to move the image in zoom mode.

### To play an MP3 Disc:

- When playing a MP3 disc, there will be a menu on the TV. Press the【▲】or【▼】button to shift the cursor to select the track or folder then press 【ENTER】 button to play the selected track or folder ( for some MP3 discs, you need to enter the sub-folder to select the track then press 【ENTER】 button to play ).
- You can also use the number buttons to select a track ( for example: press 【4】 【5】 then press 【ENTER】 to play the 45th track ).
- There are two play modes for an MP3 disc: Folder or File Play. The default mode is Folder Play. Press 【PROG】 button to select your required mode. In File Play mode, the screen will display the total track number and the current playing track. Use the number buttons to select a track or use 【▲】 【▼】 button to shift to the required track and press 【ENTER】 to play .
- Multi-File Operation Method: Press RETURN to go back to the File Menu then press UP/DOWN to select the file and press ENTER.

### USB Openation

1. Press the USB button on the remote control then use the UP/DOWN direction buttons to select an option.
2. Press PLAY/ENTER to switch to the selected option.
3. If a disc is not loaded, the player will automatically check the presence of a USB device or digital card. If one of these devices are found, the player will automatically start playing its content or display the screen menu of the device.
4. The largest capacity for USB is 16G

## Troubleshooting

| Problem   | Reason  | Method to solve the problem   |
|---|---|---|
| Power connected but player does not work.                               | Plug not inserted correctly.  | Connect the power supply again.   |
| There is a disc inserted but there are no tracks.                       | The disc is inserted upside down; the disc is dirty; the disc is badly cracked.   | Correctly insert the disc; clean the disc; replace the disc.  |
| There is no sound.  | The audio output wire is not correctly connected or is loose; the TV or amplifier is not in normal working condition.                 | Connect the audio wire again; check if the TV is in AV mode; check if the amplifier is in normal working condition. |
| There is no picture.  | The video output wire is not correctly connected or is loose; TV is not in normal working condition.                                  | Connect the video wire again; check if the TV is in AV mode.  |
| The picture has no colour.  | The picture mode of the TV is not the same as the player.   | Change the picture mode system set up.  |
| The remote control does not work.                                       | The batteries do not have enough power; the remote control is not pointed correctly at the remote sensor; the remote sensor is dirty. | Change the battery; point the remote control directly at the remote sensor; clean the surface of the remote sensor. |
| Whilst playing, the picture freezes or skips or the sound is distorted. | The disc is dirty or cracked.   | Clean or replace the disc; move the speaker away from the player.   |
| The player does not work.   | Another electrical appliance is interfering with the player.  | Turn the power off and on again. If the player still does not work, please contact the Service Centre.              |

Please note:

1. In order to prolong the player's life, please only restart it after 30 seconds once it has been switched off.
2. To avoid possible damage, please unplug the player during storms or when it will not be used for an extended period of time.
3. This player must be connected to a matching rated voltage.