

Clock Radio with Dual Alarm

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.

WARNINGS AND PRECAUTIONS

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Introduction and Setup

AC Power

To power the unit, plug one end of the included AC/DC adaptor into the unit and the other into a standard AC outlet.

Power supply: DC5V,
AC adaptor input:120V~,60Hz
(adaptor included)

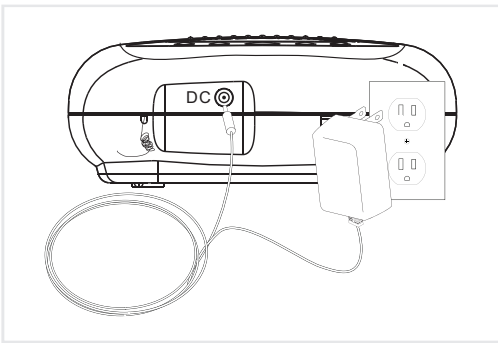


DC backup

DC backup: 3V battery (2 x AAA/LR03)


NOTE:

Do not mix old and new batteries.

 Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

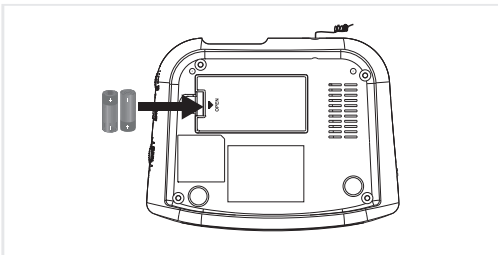

 Replace the battery if the device is not used for a prolonged period of time (more than 1 month);Please take the battery out in order to prevent leakage of battery acid.

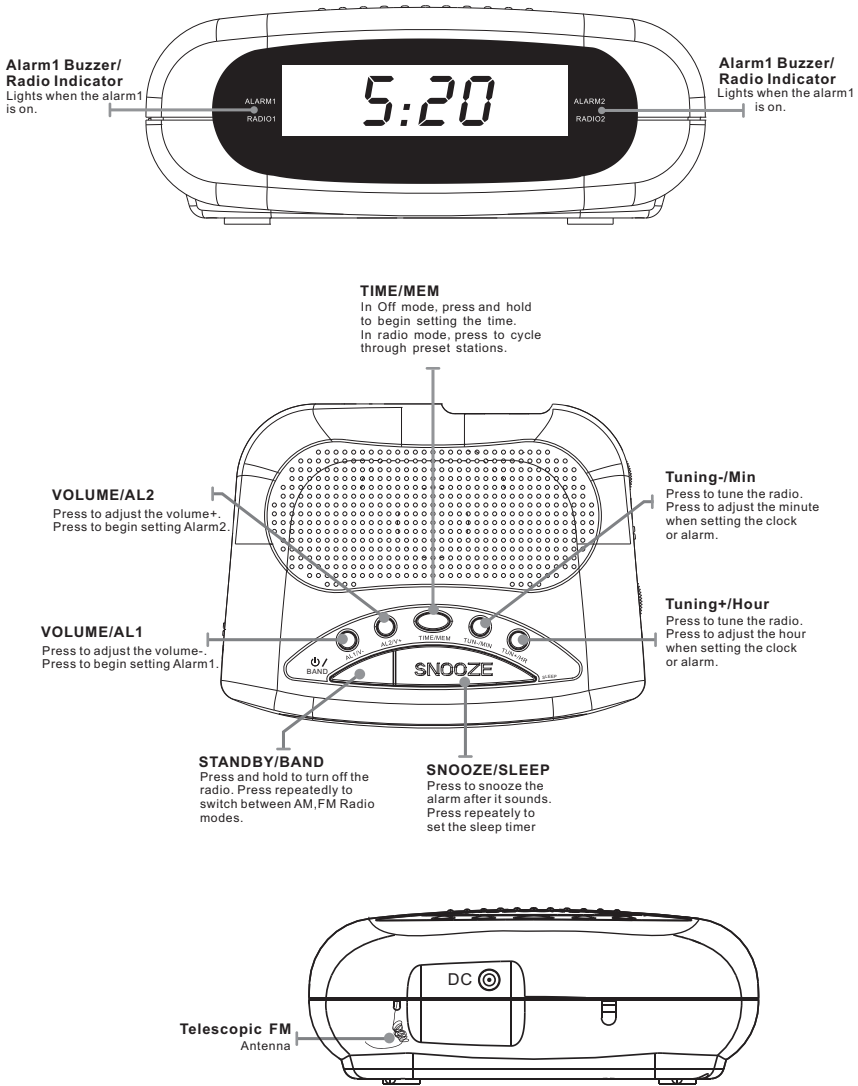

Clock and Sleep Timer

Setting the Clock

1. If in Radio mode, press and hold the ϕ /BAND button to turn the unit off.
2. Press and hold the TIME/MEM button until the display begins to blink, then release the button.
3. Press the HOUR button to adjust the hour.
4. Press the Min button to adjust the minute.
5. Press the TIME/MEM button to finish setting the time.

Radio

Playing the AM/FM Radio

1. Press the ϕ /BAND button to turn the clock radio on.
2. Press the ϕ /BAND button again to switch between the AM and FM radio mode.
3. Press the TUN+ and TUN- buttons to adjust the radio to the desired frequency.
4. Press and hold the TUN+ and TUN- buttons to search for the next available frequency.
5. Press the VOL+/- buttons to adjust the volume.
6. Press and hold the ϕ /BAND to turn the radio off.

Radio

Radio Reception

1. Adjust the position of the **Telescopic FM Antenna** to improve FM radio reception.

An AM antenna is built into the unit. To improve AM radio reception, adjust the position of the unit.

Saving a Station as a Preset

1. Follow the instructions for Tuning the AM or FM Radio.
2. Tune to the desired station.
3. Press and hold the TIME/MEM button and press TUNE+/- buttons to choose your desired program location (between P01 and P10) to save .
4. Press the TIME/MEM button again to confirmed store the current radio station as a preset in the memory list (can be 10 stored station) .

Tuning to a Preset Radio Station

1. Follow the instructions for Tuning the Radio and Saving a Station as a preset.
2. Press the TIME/MEM button to cycle through preset radio stations.
3. Press TIME/MEM buttons to choose preset radio station.

Alarm

Setting the Alarm

1. If in radio mode, press and hold the ϕ /BAND button to turn the unit off.
2. Press and hold the AL1 or AL2 button.
3. Press the HOUR button to adjust the hour.
The PM indicator will light when the hour is set in the PM.
4. Press the MIN button to adjust the minute.
The Alarm1 or Alarm2 indicator will come on.
5. Press the AL1 or AL2 buttons repeatedly to switch between Radio, Buzzer or off .
If the alarm is set to Radio, use the VOL +/- buttons to adjust the volume of the alarm.
6. Once the set alarm time is reached, the alarm will sound .
To set the other alarm, follow the above steps and choose the alarm not currently set.

Cancelling the Alarm

1. Follow the instructions for Setting the Alarm.
2. Press the AL1 or AL2 buttons repeatedly until the indicator is no longer lit.

Snooze and Alarm Reset

After the alarm sounds:
Press SNOOZE button to elay the alarm for an additional 9 minutes.
Or press the ϕ /BAND button to turn the alarm off until the set alarm time is reached again.

SLEEP

1. If in radio mode, press the SLEEP button repeatedly to set the sleep timer (90, 80, 70, 30, 20, 10 min or OFF).
2. Once the set sleep time has expired the clock radio will automatically power off.