



MARCELA BLUETOOTH PARTY SPEAKER


USER MANUAL



UL-BTPS20

Thank you for purchasing the Ultra-link Marcela Bluetooth Party Speaker. Before using, please read the instruction manual carefully to ensure correct use, efficiency and customer satisfaction.

CONTROL PANEL:

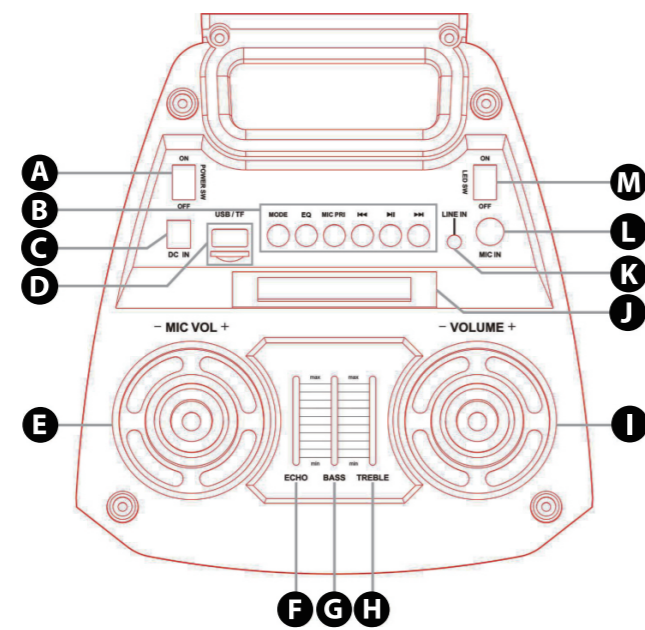

- A** Power Switch (turn on/off speaker)
- B** Mode/ EQ/MIC Priority/Previous/Pause & Play/ Next Song
- C** Charging interface (Power in direct current 5V/1A)
- D** USB/ TF Input
- E** Microphone Volume Control
- F** Microphone Echo/ Delay Control
- G** Bass Effect Control
- H** Treble (high-frequency) Control
- I** Main Volume Control
- J** LED Display
- K** Aux-in (3.5mm Input)
- L** MIC Input
- M** LED ON/OFF (Turn on/off the Light)

INPUTS:

TF Card Reader, USB Input, FM Radio, Aux Input, and Microphone Input

SETTINGS

- To increase the volume of the speaker rotate the volume knob to the right. To decrease the volume of the speaker rotate the volume knob to the left.
- To adjust the Equalizer (Microphone Echo/ Delay Control, Bass Effect Control and Treble Control) move the 3 bands forwards or backwards.
- To increase the microphone sound, reduce the volume of the speaker. When the speaker is in any other mode, user can insert the microphone into the speaker. The microphone volume and reverberation time can be adjusted on the microphone (independent device).

SWITCHING MODE FUNCTIONS

- Press "MODE" button to Switch to: "Aux in -> USB -> Micro SD -> FM radio -> Wireless Bluetooth" mode. (Voice prompt warning tone will be heard.)
- When booting for the first time booting will enter Bluetooth mode by default. Once the user reboots for the second time, the device will recall the previous mode used before the device was switched off. (e.g.: Shutdown mode memory, Volume memory and Channel search memory)


CONNECTING BLUETOOTH DEVICES

- Press "MODE" button to switch Bluetooth mode. (Bluetooth LED will flicker rapidly.)
- Navigate to the Bluetooth function of the mobile device/other bluetooth enabled device.
- Search for "MARCELA" and click to connect. (Repeat this process when connecting new devices for the first time.)
- Once the device is successfully connected, the Bluetooth LED will switch off. If required, enter the password 0000 to confirm to pairing.
- User can now use the speaker to play music/audio. (Bluetooth LED will slowly flicker)
- When the user pauses the music, the Bluetooth LED will switch off.
- To connect a new device/ another Bluetooth enabled device; disconnect the current device and repeat points 1-3.

FM RADIO FUNCTION

- Turn on the power and press the MODE button repeatedly to select the FM function (the frequency will be displayed on the LED display).
- Press the play button to activate the automatic memorization (the tuner searches for stations available and memorizes automatically). The number of memorized stations depends on the reception in your area.
- Use the next/previous buttons to listen to the memorized stations.
- To select a memorized station directly, press the corresponding numeric key on the remote control.

REMOTE CONTROL FUNCTIONS:

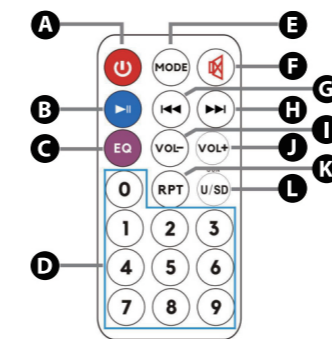

- A** ON/OFF
Press once to turn the device ON/OFF.
- B** PAUSE/PLAY
When the device is in USB/card mode, press once to play/pause a song. When the device is in FM mode, press once for auto scanning or to stop auto scanning.
- C** EQ
Press "EQ" to select the EQ mode. The "EQ" button is only applicable in the USB/TF card mode.
- D** NUMBER BUTTONS
When the device is in USB/TF mode, press any number to select a song. In FM Radio mode, press to select a channel. For the other modes, these buttons have no function.
- E** MODE
Press to select the following modes: LINE (Aux-in)/ USB / TF card/ FM Radio/ Wireless Bluetooth.
- F** MUTE
Press once to mute the sound under any mode.
- G** PREVIOUS
When the device is in USB/TF mode, press once to go back to the previous song; press and hold for 3 seconds to rewind the current song. When the device is in Bluetooth mode, press once to select the previous song. When the device is in FM mode, press once to go back to the previous channel.
- H** NEXT
When the device is in USB/card mode, press once to skip to the next song; press and hold for 3 seconds to fast forward. When the device is in Bluetooth mode, press once to skip to the next song. When the device is in FM mode, press once to skip to the next channel.
- I** VOLUME-
Press to turn the volume down in any mode.
- J** VOLUME+
Press to increase the volume up in any mode.
- K** REPEAT
Press to repeat a song.
- L** USD
Press to change USB/CARD function.

SPECIFICATIONS

- Playing Time: 3-5 hours
- Output Power: 50W R.M.S.
- Bluetooth Version: Bluetooth 4.2
- ON/OFF: Power/ LED Switch
- Power Input: DC 5V /1A Micro USB
- Battery: Lithium Battery 3.7V/3600mA
- Speaker Unit: Woofer 6.5 inch x 2 With tweeter
- Features: USB/ TF / Bluetooth / FM Radio / MIC-in /Line in Echo & Microphone Priority/ BASS/ Treble Control & 3 Bands Equaliser

FEATURES

- Powerful Sound
- LED Epic Light Show
- Rechargeable battery
- High Performance Ratio
- Fashionable seamless design
- Compatible with DVD Players, PC Mobile Phone, MP3/4/5

INSTALLATION & PLACEMENT

- Use this device in a dry and well ventilated space.
- Connect the device to the power source and select the preferred mode. Adjust the control button according to your needs.

MAINTENANCE

- Avoid listening to music at a high volume for a long period of time, as it can cause hearing loss or permanent hearing damage.
- Do not use the device anywhere near a flame ignition source or water.
- Do not use the device when its battery is low, as it may automatically disconnect or have connection issues. (Playing time 3-5 hours)
- In order to avoid damaging the product, remove the charger when the device's battery is fully charged.
- Switch off the device when charging. The red LED light will switch on while charging and when the battery is fully charged the the green LED light will switch on.

DISCLAIMER:

The Ultralink Marcela Bluetooth Party Speaker is covered with a 1 year warranty from date of purchase. The warranty granted by Interfoto CC shall be deemed null and void if the product is used for any other purpose other than its intended use or if the product is opened and serviced by any other person or company other than Interfoto CC during the warranty period. Use of this product is at the users own risk.



If you are experiencing any problems with the setup or the product itself please contact:

INTERFOTO CC
Website: www.interfoto.co.za
Email: service@interfoto.co.za
Address: 362 Roan Crescent,
Corporate Park North, Midrand
Tel: +2786 006 1046