

ULTRA-LINK

2.1 CH WIRED SOUNDBAR
USER MANUAL



UL-SB80W01

Thank you for purchasing the Ultra-link 2.1 CH Rhapsody Wired Soundbar. Before using, please read the instruction manual carefully to ensure correct use, efficiency and customer satisfaction.

SAFETY PRECAUTION



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER OR BACK
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING:
To prevent fire & electrocution, Do not expose this product or any of its components to water, fire, high temperatures or damp areas.

Note: This product is for indoor use only.

 Caution: This icon is intended to alert the user of the presence of uninsulated "dangerous voltage" that is within the products enclosure. Thus providing sufficient reason to constitute a risk of electrical shock.

 Caution: This icon is intended to alert the user of the presence of important operating and maintenance instructions in the manual & literature accompanying the product.

SAFETY INSTRUCTIONS

- 1) Please read the instructions, user manual & warning precautions carefully before using the unit.
- 2) Do not expose or use this product near water.
- 3) To clean this product use a dry cloth only. Do not use chemicals.
- 4) Do not block any ventilation openings (Place on a drafty platform to allow proper ventilation.)
- 5) Install this unit in accordance to manufacturer's instructions.
- 6) Do not install the speaker system near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that may produce excessive heat.
- 7) Protect the power cord from being pinched particularly at the plug point and the point where cables exit the unit.
- 8) Only use accessories and attachments specified/supplied by the manufacturer.
- 9) Only use standard cart/stand/tripod/bracket or table specified or sold by the manufacturer with the unit.
-  10) Use caution to avoid injury when moving the cart & unit combination to avoid injury.
- 11) Please unplug this apparatus during lighting storms or when it is not being utilized for long periods of time.
- 12) Refer all servicing to qualified service personnel.
Servicing is required when :
-The unit has been exposed to liquid substances/rain or moisture.
-Objects have fallen into the unit.
-The unit does not operate normally, or has been dropped.


1

SOUNDBAR DIAGRAM



1. AUX FUNCTION
2. OPT INPUT
3. HDMI INPUT
4. SUB OUTPUT

REMOTE FUNCTION

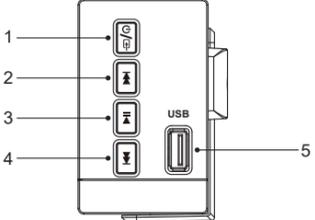


1. Press it to enter Standby ON/BT/OPT/HDMI/USB/AUX, hold it to be Standby OFF
2. Press it to select previous song in BT/USB mode, hold it to adjust volume down in all modes.
3. Press it to pause/play in BT/USB mode, hold it to disconnect or connect device in BT mode.
4. Press it to select next song in BT/USB mode, hold it to adjust volume up in all modes.
5. USB input

2

BATTERY INSTALLATION


- 1) Open the battery case.
- 2) Insert 2pcs AAA battery without the polarity reversed.
- 3) Close the battery case.
- 4) Keep within 5 meter range, 30 degree angle while aiming at the unit.

Precautionary note:
Please remove batteries when the unit is not being used for a long period of time.

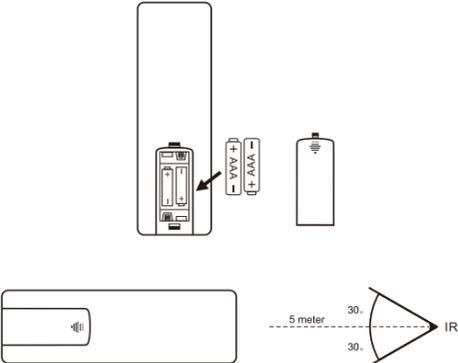

3

REMOTE CONTROL FUNCTION

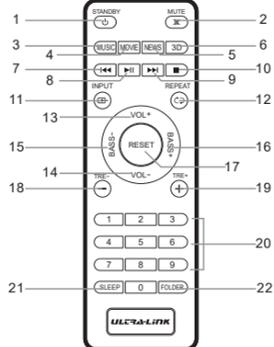

1.  : Standby ON/OFF
2.  : Mute ON/OFF
3. MUSIC: Default sound effect for music
4. MOVIE: Default sound effect for movie
5. NEWS: Default sound effect for news
6. 3D: Default sound effect for surround
7.  : Press it to select previous song in USB/BT mode; Hold it to rewind the song in USB mode.
8.  : Press it to pause/play in USB / BT mode; Hold it to disconnect/connect Bluetooth device;
9.  : Press it to select next song in USB/BT mode; Hold it to fast forward the song in USB mode.
10.  : To stop the playback
11. INPUT: To switch playback modes of BT/OPT/HDMI/USB/AUX IN
12. REPEAT: To switch playback sequence of ONE/ALL/rAN(random)/FOd(folder playback)/OFF
13. VOL+: Volume up
14. VOL-: Volume down
15. BASS-: Volume down of bass
16. BASS+: Volume up of bass
17. RESET: To restore default values
18. TRE-: Volume down of treble
19. TRE+: Volume up of treble
20. 0-9: To choose the song numerically
21. SLEEP: To set the countdown time to standby status
22. FOLDER: To choose the music folder in USB disk

4

WHAT'S IN THE BOX

1. Subwoofer	: 1 unit
2. Soundbar	: 1 unit
3. Audio Cable	: 1 unit
4. User Manual	: 1 unit
5. Remote Control	: 1 unit

UNIT OPERATION

1. - Plug the RCA cable of woofer to the Bass output port on sound bar.
 - Plug the 5.5 DC adaptor cable to the DC port on the sound bar.
 - Plug the power cable of the sound bar to the external socket, the unit is in standby mode.
2. Use the audio cable (2RCA to 3.5 or 3.5 to 3.5) to connect external audio source (DVD, Mobile, TV) display unit will show "AUX".
3. Press the "input" button to change to "USB" mode, display will show USB.
4. Press the "input" button to change to "BT" mode, search "UL-SB80W01" on the device and connect.

SPECIFICATIONS

Output Power: 80 Watts
 Driver Unit: 5.25" *1+2"*2
 Frequency Response: 40Hz-20KHz
 Separation: >=45dB
 Distortion: =0.3%
 S/N: >=80dB
 Voltage: AC 110-240V 50/60Hz

5

DISCLAIMER

The Ultra-link 2.1 CH Multimedia Speaker is covered with a 1 year warranty from date of purchase. The warranty granted by Interfoto CC shall be deemed null and void if the product is used for any other purpose other than its intended use or if the product is opened and serviced by any other person or company other than Interfoto CC during the warranty period.
 Use of this product is at the users own risk.

If you are experiencing any problems with the setup or the product itself please contact Interfoto CC as below:

Email: support@ultralink.co.za
 Address: 20 Roan Crescent, Corporate
 Park North, Midrand
 Tel: +2786 006 1046